


RIBBON ADHESIVE APPLICATION FULLY ADHERED APPLICATION TYPICAL 4' X 4'

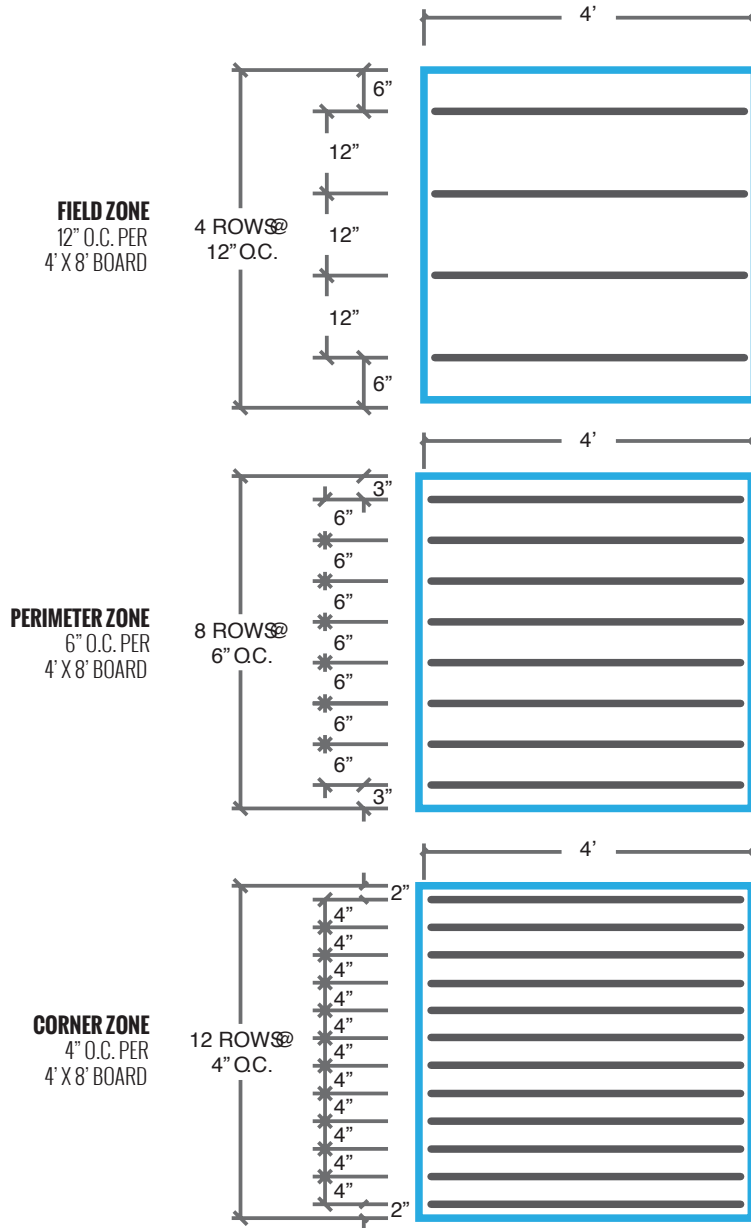

Notes:

- Ribbon beads should be 1/4" to 1/2" diameter when dispensed from applicator and spaced as per these diagrams.
- Insulation should be applied to the ribbon beads when adhesive is dispensed as there is no "wait time" to allow adhesive to foam up.
- Never allow the ribbon bead to "skim over" by delaying the application of the insulation.
- Insulation should be applied immediately in warm or humid conditions which speed up the cure time for the adhesive.
- Only flat insulation boards should be installed.