


OUTSIDE CORNER DETAIL

1. True Sea™ Low VOC Bonding Adhesive
2. T-Patch
3. Outside Corner

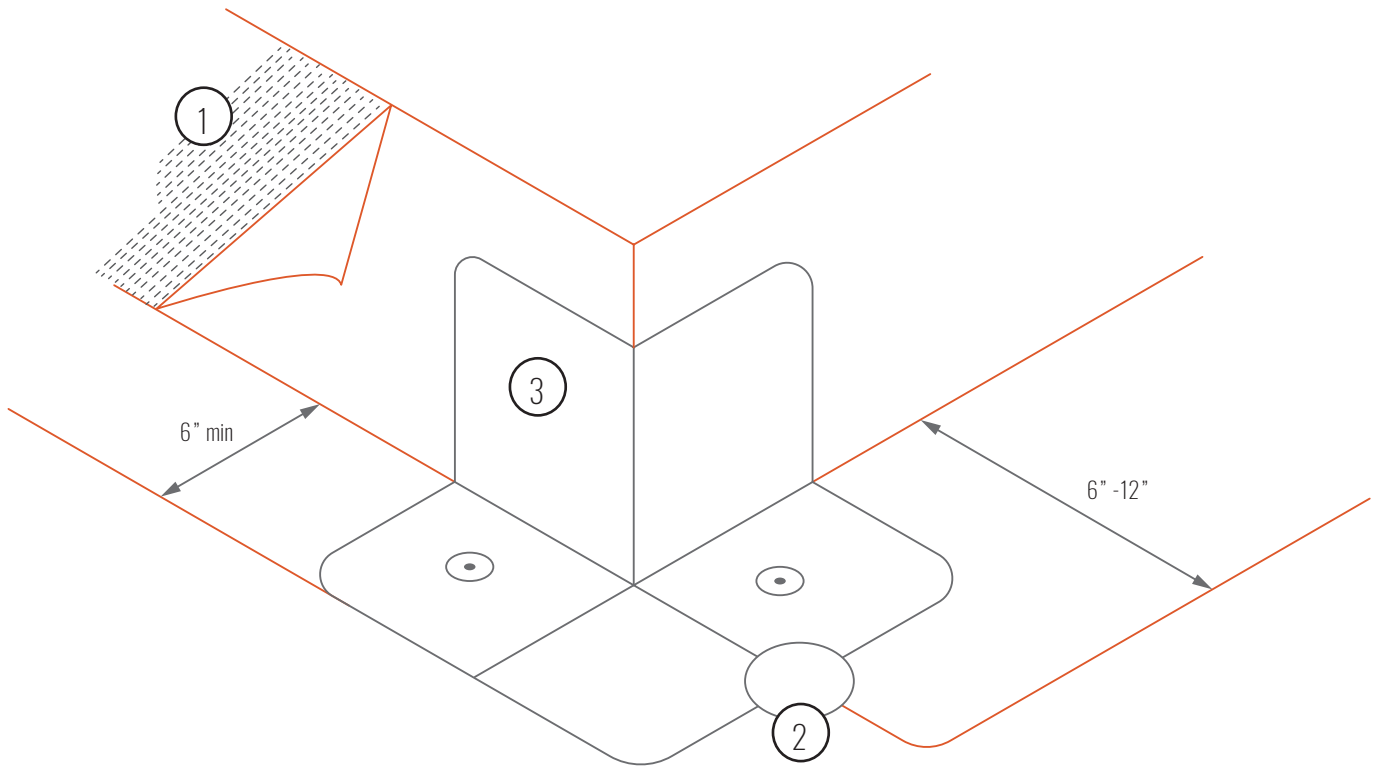

Notes:

- Vertical Insulation (if applicable) must be secured at a rate of 1 True Seal™ fastener and insulation plate per 2 sqft
- Vertical flashing must be in 100% adhesion with True Seal™ Low VOC @ 60ft²/gallon.
- Install T-patches on all step-downs
- Perimeter securement (mechanical perimeter securement) is required on all True Seal™ Systems and True Seal™ fasteners and metal membrane plates installed typically at 12" on center.
- Field welds are a minimum of 1.5"
- Outside corner must be fully welded (100%) to the vertical flashing membrane and horizontal field membrane
- Please contact the True Seal™ Technical Department for clarifications or questions at tech@true-seal.com