


INSIDE CORNER DETAIL

1. True Seal™ Low VOC Bonding Adhesive
2. T-Patch
3. Inside Corner

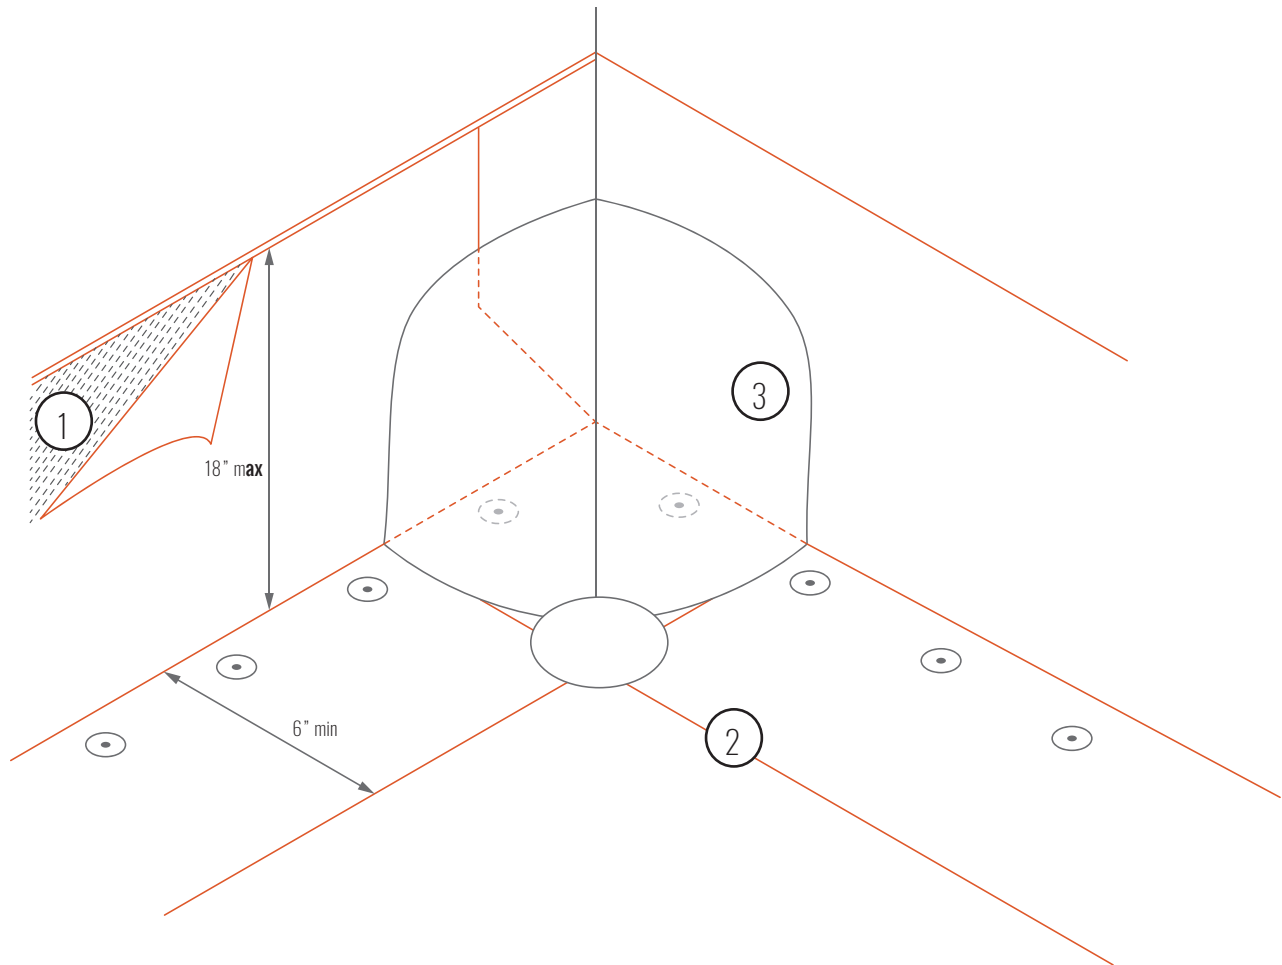

Notes:

- Inside corner must be fully welded (100%) to the vertical flashing membrane and horizontal field membrane.
- Install T-patches on all step-downs
- Vertical Insulation (if applicable) must be secured at a rate of 1 True Seal™ fastener and insulation plate per 2 sqft.
- Vertical flashing must be in 100% adhesion with True Seal™ Low VOC Bonding Adhesive at a rate of 300 sqft per 5 gal pail.
- Perimeter securement (mechanical perimeter securement) is required on all True Seal™ Systems and True Seal™ fasteners and metal membrane plates installed typically at 12" on center.
- Please contact the True Seal™ Technical Department for clarifications or questions at tech@true-seal.com