
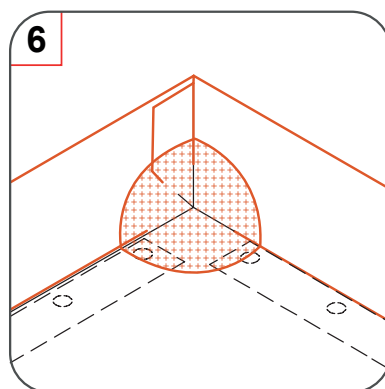
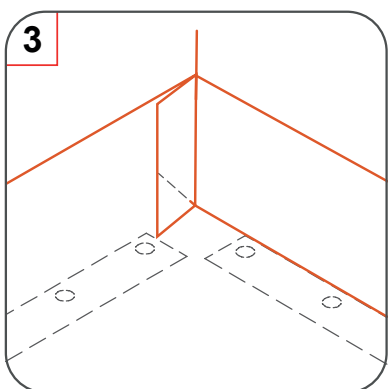
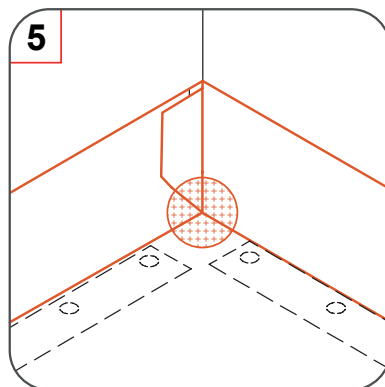
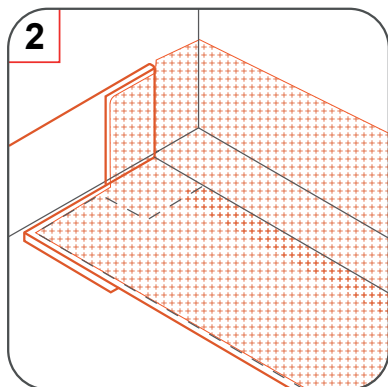
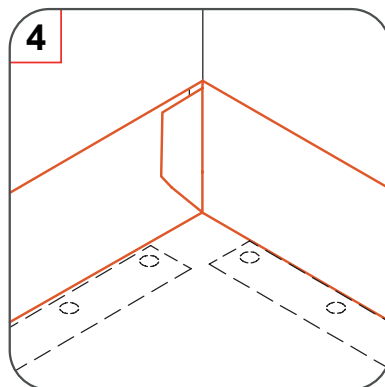


## INSIDE CORNER DETAIL

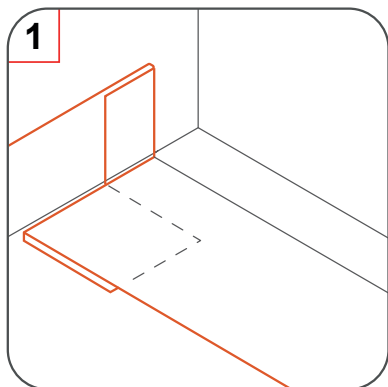

1. Membrane should be cut and folded back in the corner areas as shown in diagram #1 with spacing from wall to approximately 6". At all times, seam and bonding areas are to be kept clean, dry, and without dirt and debris.
2. Apply bonding adhesive in the bond area only with care not to over roll in seaming areas as per diagram #2.
3. Apply membrane to the wall as in diagram #3 with care to have no wrinkles and folds. Membrane should only be mated to the wall surface when the adhesive has set up properly.
4. As in diagram #4, fold and trim (top) of "dog ear" and weld inside face of dog ear together.
5. Special care should be taken as in diagram #5 to make sure the bottom of the "dog ear" is pushed in tight to the 3 dimensional angle change and welded tight to the wall.
6. Diagram #6 shows the application of the pre-moulded inside corner which is to be installed in a full welding of all faces of the corner.