


1. True Seal™ Weldable walkpad
2. True Seal™ Membrane
3. Field Weld (1.5" Minimum)
4. Approved True Seal™ Insulation and/or cover Board
5. Roof Deck

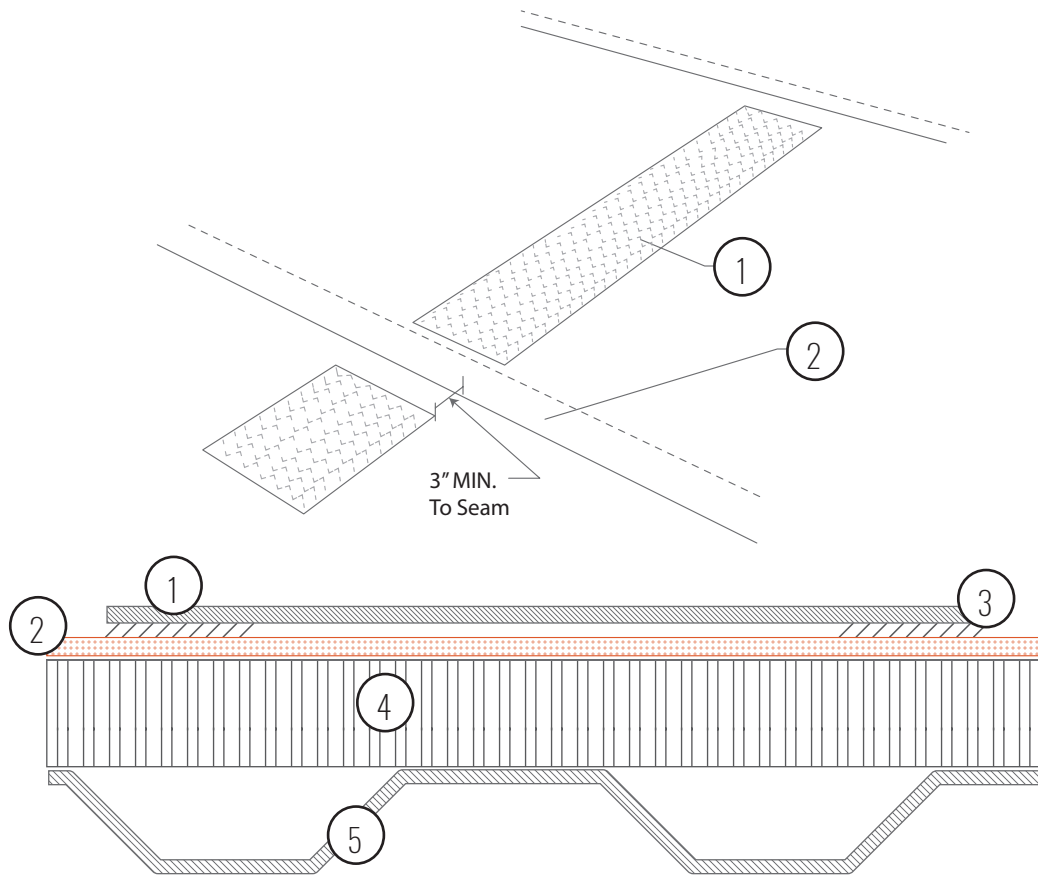

**Notes:**

- Please refer to the True Seal™ Specification Manual for approved insulations and cover boards
- Walkpad is to be seamed (hot air welded) on all sides.
- Walkway hot air welding as per True Seal™ Specification Manual
- Walkpad shall not be installed over field seams and details seams
- 3" minimum clearance from all field seams and detail seams
- Field Welds shall be a minimum of 1.5"
- Walkways are not to be substituted as field membrane and must always be installed over True Seal™ membrane.
- Please contact the True Seal™ Technical Department for clarifications or questions at [tech@true-seal.com](mailto:tech@true-seal.com)