


TROUGH EDGE DETAIL

1. Wood Nailer
2. True Seal™ Membrane
3. True Seal™ Caulking
4. True Seal™ Termination Bar
5. Term Bar Butyl Tape
6. Trough
7. Approved True Seal™ fastener

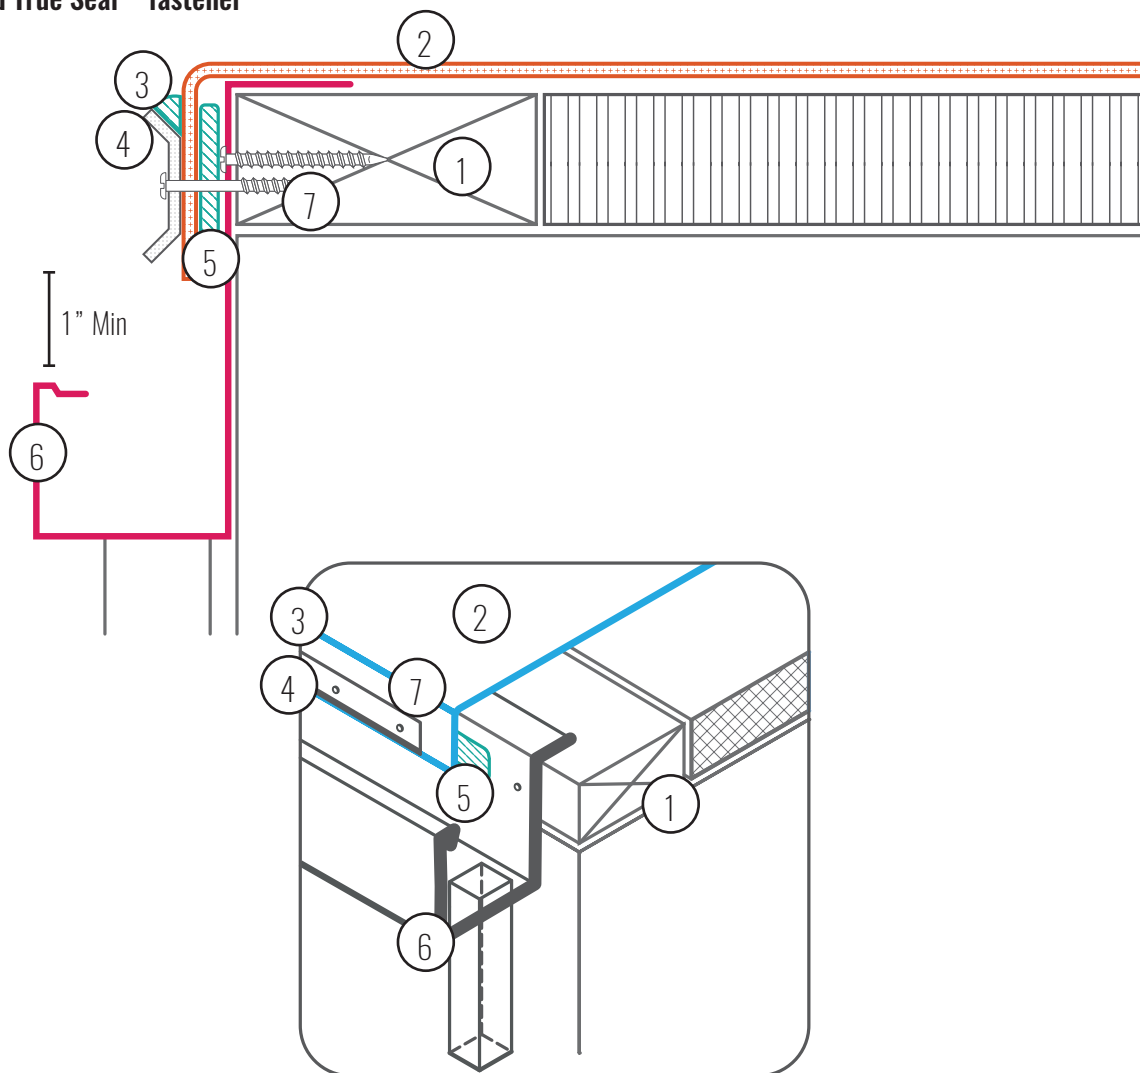

Notes:

- Please refer to the True Seal™ Specification Manual for approved Insulations and Cover Boards.
- Wood nailer must be secured (minimum 24" on center) as per the requirements contained in the True Seal™ Specifications or FM Global whichever is greater.
- Trough must be secured at a minimum of 24" on center or as per FM Global requirements.
- Trough (outer edge) must be 1" below the termination bar.
- Termination bar must be fastened at 12" on center.
- Perimeter securement (mechanical perimeter securement) is required on all True Seal™ Systems.
- Termination bar fastener must penetrate the term bar butyl tape.
- Please contact the True Seal™ Technical Department for clarifications or questions at tech@true-seal.com