


PARAPET METAL CAP DETAIL (SLOPING)

1. Metal Cap
2. True Seal™ Membrane
3. Profile Strip Fastener
4. Profile Strip Cleat
5. Wood Nailer
6. True Seal™ Bonding Adhesive

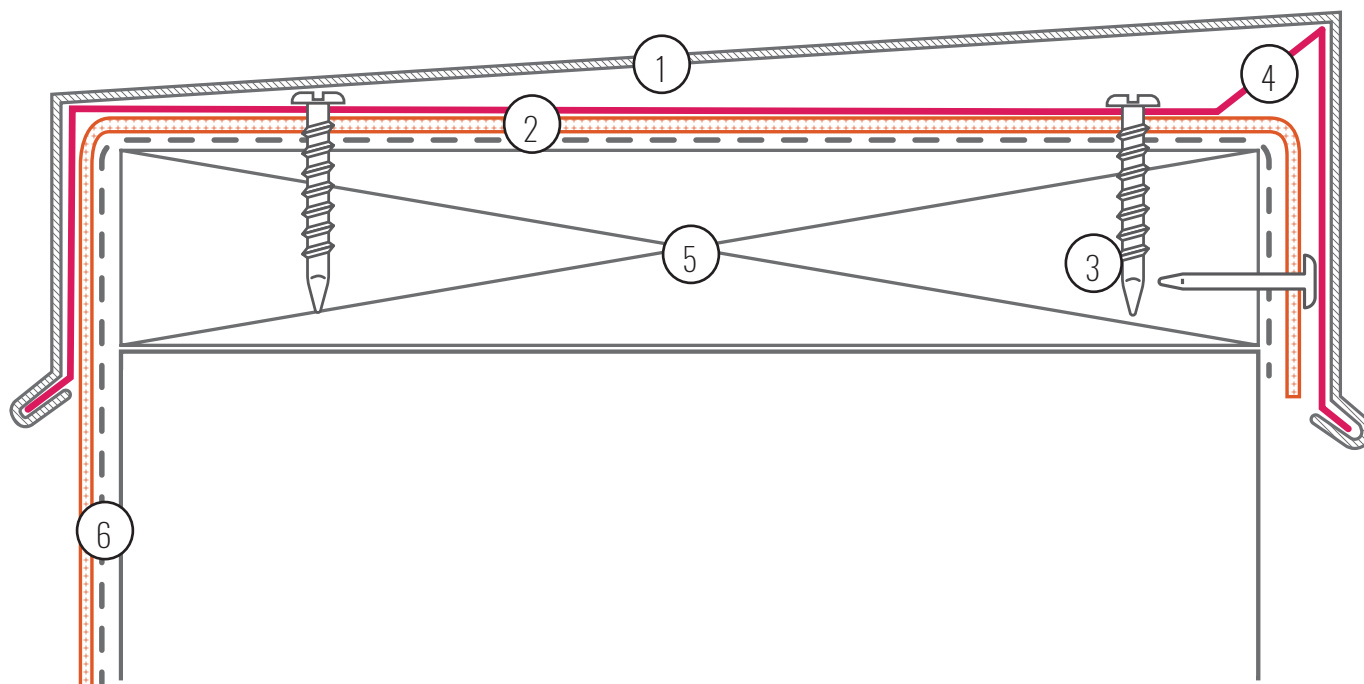

Notes:

- Wood nailer must be secured (minimum 24" on center) as per the requirements contained in the True Seal™ Specifications or according to FM Global whichever is greater.
- Attachment of cleats shall be maximum 24" on center.
- Metal cap flashing to meet or exceed FM Global guidelines.
- True Seal™ membrane must be adhered with True Seal Low VOC bonding adhesive.
- Metal Cap flashing to always slope to inside of roof.
- Please contact the True Seal™ Technical Department for clarifications or questions at tech@true-seal.com